
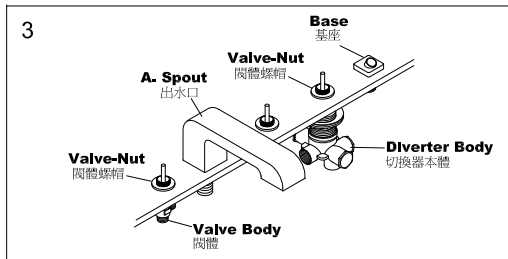
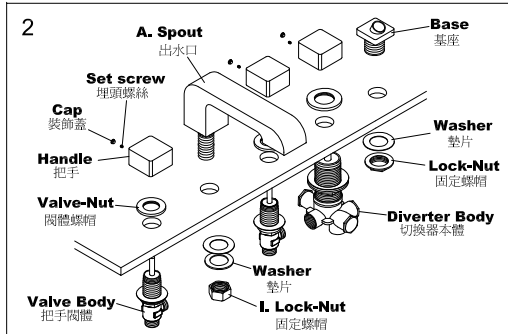


INSTALLATION INSTRUCTIONS

Three Handle Bath Tub Faucet 浴缸龍頭安裝說明

PATENT NUMBER:
專利號碼:
D131972
US D606,172 S

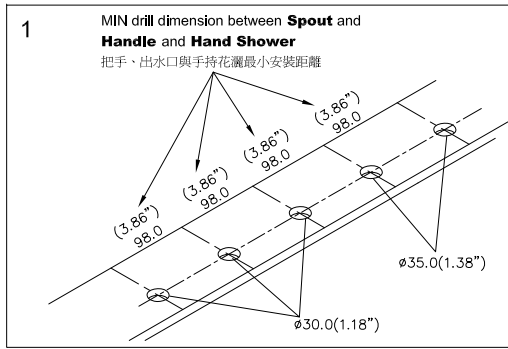

CAUTION : Risk Of Product Damage.

注意：為增加產品使用壽命，請依說明清潔供水管路。




a./ Turn the angle stops (water suppliers) on and run for 1 minute before connect supply hose (flexible hose) to faucet body, or b./

安裝編織管之前，先把供水開關全開排水一分鐘。或 b./

b./ Connect and tighten the faucet and angle stops with supply hose (flexible hose) to finish installation, then remove the aerator, fully turn on the hot and cold water valves on faucet and run for 1 minute, then turn off the water and reinstall the aerator.

把龍頭、供水開關及編織管接好並鎖緊之後，把起泡器移開，把熱水及冷水全部轉開一分鐘，然後把水關掉再把起泡器裝回去。

- Drill 5 holes on appropriate position as Fig.1 shown.
如 Fig.1 所示在適當的位置鑽5個孔。
- Disassemble **Washer, Lock-Nut and Gasket** from **Spout**. Disassemble **Caps, Set screws, Handles and Valve-Nuts** from **Valve Bodies and Diverter Body**. Disassemble **Lock-Nut and Gasket** from **Base** before install as fig.2 shown.
如 Fig.2 所示，組裝前將墊片、固定螺帽及橡膠墊片從出水口拆下。將裝飾蓋、埋頭螺絲、把手及閥體螺帽從把手閥體及切換器閥體拆下。將固定螺帽及墊片從底座上拆下。
- Insert the **Valve Bodies** and **Diverter Body** from below through the $\phi 30\text{mm}(1.18\text{'})$ and $\phi 35\text{mm}(1.38\text{'})$ holes and fasten the **Valve-Nuts**, then secure the **Valve Bodies** and **Diverter Body** by tightening the **Lock-Nuts** with **Washers** as Fig.3 & Fig.4 shown.
如 Fig.3 與 Fig.4 所示，將把手閥體及切換器閥體從下方穿過 $\phi 30\text{mm}(1.18\text{'})$ 及 $\phi 35\text{mm}(1.38\text{'})$ 的孔並且鎖入閥體螺帽，然後鎖緊固定螺帽和墊片來固定把手閥體及切換器閥體。
- Place the **Spout** and **Base** down into the $\phi 30\text{mm}(1.18\text{'})$ and $\phi 35\text{mm}(1.38\text{'})$ holes, then secure **Spout** and **Base** by tightening **Lock-Nut** with **Washer** and **Gasket** as Fig.3 & Fig.4 shown .
如 Fig.3 與 Fig.4 所示，將出水口及底座放入 $\phi 30\text{mm}(1.18\text{'})$ 及 $\phi 35\text{mm}(1.38\text{'})$ 的孔，然後用固定螺帽及墊片鎖定出水口及底座。
- Connect **Valve Bodies** to **Diverter Body** and water supplies with **Flexible Hoses**. Connect **Diverter Body** to **Spout** and **Hand Shower** with **Flexible Hoses** and **Shower Hose** as Fig.5 shown.
如 Fig.5 所示，用不銹鋼軟管連接閥體到出水口連接管及供水口。用不銹鋼軟管及蛇管連接切換器到出水口連接管及手持花灑。
- Locate **Handles** onto **Valves Bodies** and **Diverter Body** then tighten **Set screws** into the hole then cover the handle holes with **Cap** as Fig.6 shown.
如 Fig.6 所示，將把手安裝在閥體上然後埋頭螺絲對準洞鎖緊並用裝飾蓋蓋住螺絲孔。
- Connect **Hand Shower** with **Shower Hose** as Fig.6 shown.
如 Fig.6 所示，將手持花灑鎖在蛇管上。

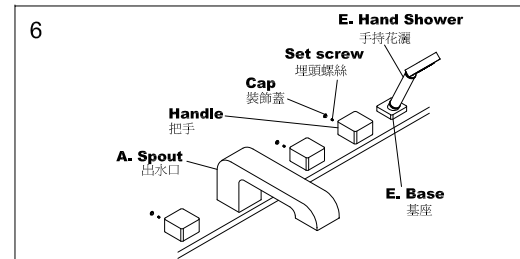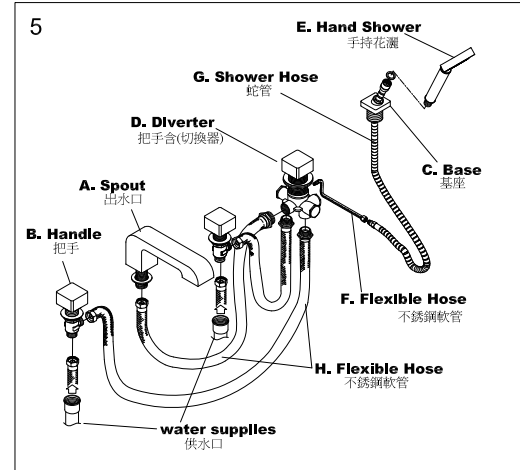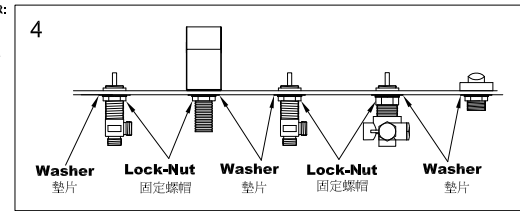

FIXING CONTENTS

組配件內容

