


## INSTALLATION INSTRUCTIONS

### Automatic Urinal Flush

感應式小便斗沖洗器安裝說明

### Applicable Product Number:

適用產品型號:

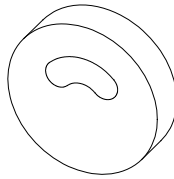

6390-S0-8100 110V

6390-S0-8200 220V

6390-S0-8300 100-240V

# CARE & CLEANING

## 清潔與保養

**CAUTION : This product might be damaged by improper installation, acid cleaning solution, misuse, improper care and cleaning.**








1. Always follow the INSTALLATION INSTRUCTIONS provided and use extreme care while installing.
2. Do not use acid cleaning solution or abrasive cleaner (Ex: Hydrochloric acid or toothpaste); test your cleaning solution on an inconspicuous area before applying to the entire surface.
3. Wipe surfaces clean and rinse completely with water immediately after applying cleaner. Do not soak with cleaners. Rinse and dry any overspray that lands on nearby surfaces.
4. Use a dampened sponge or cloth to clean surface. (Do not use abrasive material such as brush or scouring pad. )
5. Please use alkaline batteries from well-known brand and with good quality. The battery brand should be consistent to avoid affecting battery lifespan.
6. When installing, please make sure the pipe is clean; if not, before installation, please drain the water until it is clean.

注意：此產品有可能因為不當安裝，誤用酸性清潔劑或清潔方式不正確而造成產品受損。

1. 產品安裝時必須依照產品所附的安裝說明和操作方式安裝。
2. 不可使用含有酸性或具研磨效果的清潔劑清洗（例如：鹽酸、牙膏），請先在產品較不顯眼的地方測試您的清潔方法，然後再應用到整個表面。
3. 產品塗佈清潔劑後，應立即擦拭除污，用清水沖洗，並擦乾產品和檯面。切勿讓清潔劑在產品表面浸濕潤漬過久。
4. 請使用濕海綿或乾淨棉布擦拭產品表面。（不可使用會刮傷或具研磨材質的刷子及鋼刷）。
5. 使用的電池必須具有一定知名度,品質佳的鹼性電池,電池品牌須一致不可混搭,避免影響產品壽命。
6. 安裝時必須確保管路是否乾淨,如不乾淨請將水管裡的水放掉,直到水乾淨為止,再安裝。

# CAUTION

## 注意事項

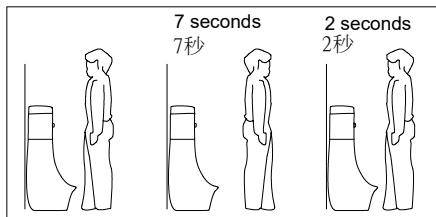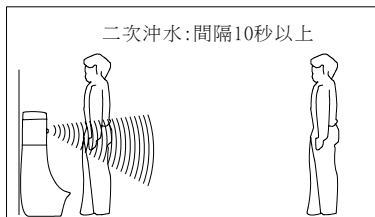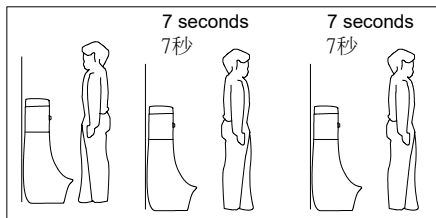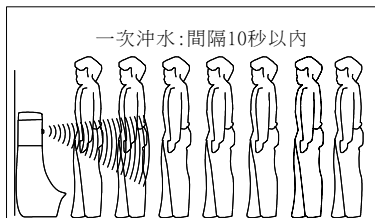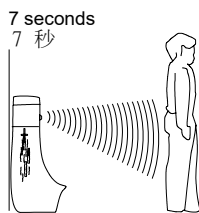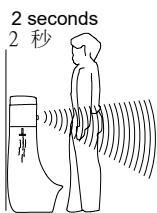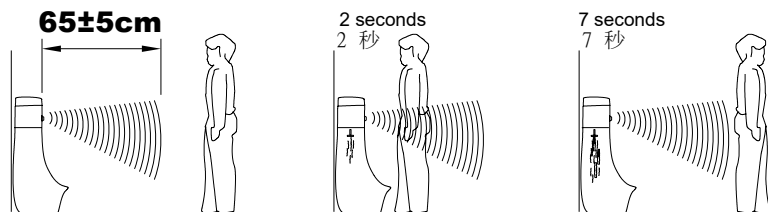

1. Sensing time: 1 sec. (The product would not activate if sensing time is less than 1 sec)
2. Under average working condition, when the person stayed in the sensing zone for 1 second, the sensor would flush for 2 seconds first; after the person left, it would flush again for 7 seconds.
3. Whether the sensor flush once or twice is determined by the frequency of use on the urinal.
4. When the first person used the urinal, the sensor would not flush if the second person approach within 10 seconds; but it would flush for 7 seconds after the second person left.
5. The sensor would flush first for 2 seconds, when another person used the urinal 10 seconds later; and after the second person left, it would flush for 7 seconds.


1. 感應確認時間為1秒（小於1秒不啟動）。
2. 一般工作狀態，當有人進入小便斗感應範圍達到1秒時，感應器進行第一段沖水2秒，當人離開，感應器即進行第二段沖水7秒。
3. 根據小便斗的使用頻率來判斷一次沖水或是二次沖水：  
3-1：一次沖水：當前一次沖水完成後，時間在10秒以內有人接下去進行小便，機器不會執行第一段沖水(2秒)，當人離開後機器執行第二段沖水(7秒)。  
3-2：二次沖水：當前一次沖水完成後，時間超過10秒以上才有人接下去進行小便，機器會執行第一段沖水(2秒)，當人離開後機器執行第二段沖水(7秒)。

# FIXING CONTENTS

## 組配件內容

### A. Rectifier \* 1

整流器

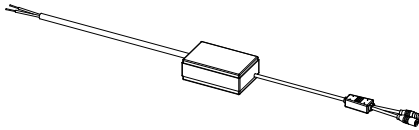


### B. Battery Box \* 1

電池盒




### C. Controller \* 1

控制器

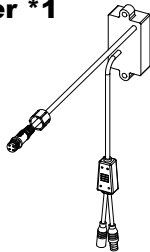

### D. Sensor \* 1

感應器

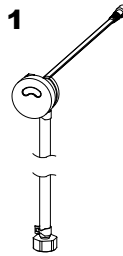

### E. Valve \* 1

W/ Screw \* 2

W/ Plastic Anchor \* 2


電磁閥

螺絲 / 塑膠壁虎



### F. Braided Hose \* 1

編織管 30cm

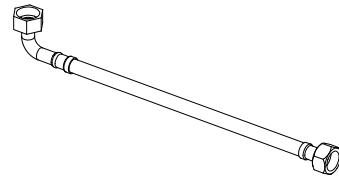

使用電源 Power Usage	AC 100V-240V , 50/60Hz ; DC 6V
靜耗 Stand-by Power Consumption	AC ≤2W ; DC≤0.2mW
感應距離 Sensing Distance	標準設定65±5cm (對30*30標準白紙) Standard Setting: 65±5cm (30*30 blank paper)
水壓 Water Pressure	0.05~0.8MPa
溫度 Temperature	0~40°C
進出水管徑 Inlet/Outlet Pipe Diameter	G1/2

# FAULT RESOLUTION

## 簡單故障排除

現象 Scenarios	故障原因 Factors	處理方法 Solutions
不出水 No water	電池電能耗盡(電池供電產品) Battery out of power (Powered by batteries)	要換新電池 Replace with new batteries
	停電(交流供電產品) Power failure (Powered by alternating current)	等待來電 Wait for power supply to resume
	電源故障(交流供電產品) Power supply malfunction (Powered by alternating current)	檢查電源接線盒 Check the power connection box
	停水 Water cut	等待來水 Wait for water supply
	過濾網太髒造成淤堵 Filter clogging due to dirty filter	清洗過濾網 Clean the filter
	水壓不在使用範圍 Low water pressure	等待水壓上升 Wait for water pressure to rise
不關水 Water supply won't shut off	電池潮濕引起線路板短路 Short circuit due to wet battery	更換線路板 Change current panel
	突然停電 (交流供電產品) Sudden power failure (Powered by alternating current)	等待來電 Wait for power supply to resume
	電源故障 (交流供電產品) Power supply malfunction (Powered by alternating current)	檢查電源接線盒 Check the power connection box
	感應窗有污垢 Dirt on sensor window	擦除污垢 Wipe off the dirt


# FAULT RESOLUTION

## 簡單故障排除

現象 Scenarios	故障原因 Factors	處理方法 Solutions
關水後有少量 Residual coming out after water shut off	水壓太低 Low water pressure	等待水壓上升 Wait for water pressure to rise
	過濾網太髒 Dirty filter	清洗過濾網 Clean the filter
出水量太小 Too few water outlet	水量調節太小 Small water volume	將水量調節鈕調整大些 Slightly turn up water volume
	過濾網太髒 Dirty filter	清洗過濾網 Clean the filter
	水壓太低 Low water pressure	等待水壓上升 Wait for water pressure to rise
	電磁閥內的開關片去水孔有異物 Something stuck on the drain hole of electromagnetic valve	清除開關片去水孔中的異物 Clen the drain hole
出水量太大 Too much water outlet	水量調節太大 Strong water volume	將水量調節鈕調整小些 Slightly lower water volume
	水壓太高 High Water pressure	請參考產品規格 Please follow product specifications
電源使用時間短 Short power usage	使用非鹼性或劣質電池(電池供電產品) Use non-alkaline or low-quality batteries	重新更換規定電池 Replace with designated batteries
感應指示燈 不亮 Sensor light won't lit	指示燈已壞 Indicator light is broken	更換指示燈或電路板 Change either the light or circuit panel
	空中插的電源插入線,插腳接觸不良 Poor contact of the pin on the power plug-in cord	拔出空中插入針頭退出 插腳用鉗子重新鉗緊插腳 Plug out the pinhead, remove the pin, and tighten the pin again with pincer
	線路板或信號線潮濕 Wet circuit panel or signal wire	用冷風吹乾(或空氣中 晾乾)線路板或信號線 Air-dry circuit panel or signal wire, or dry with cold air


# INSTALLATION INSTRUCTIONS

## 安裝說明

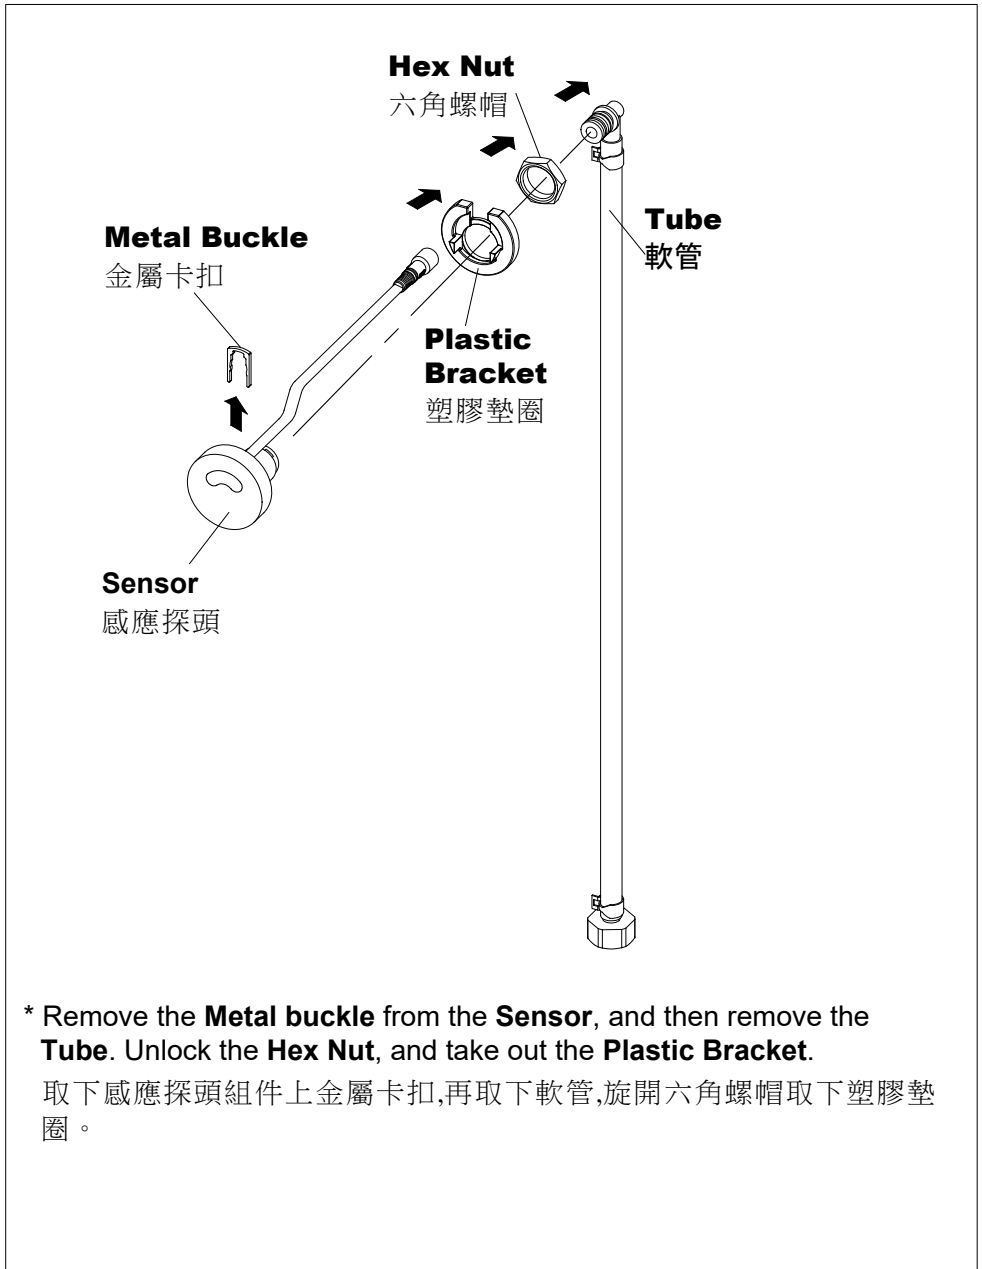

\* Remove the **Metal buckle** from the **Sensor**, and then remove the **Tube**. Unlock the **Hex Nut**, and take out the **Plastic Bracket**.


取下感應探頭組件上金屬卡扣,再取下軟管,旋開六角螺帽取下塑膠墊圈。

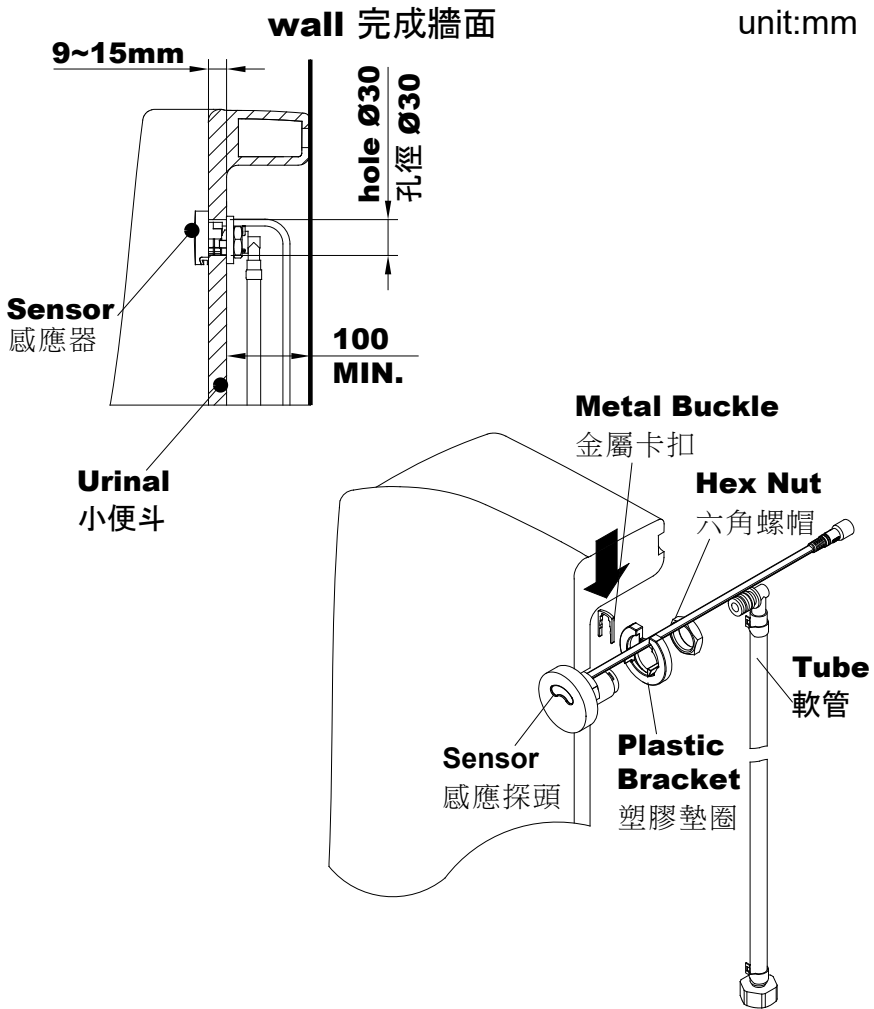

\* Choose the **urinal** of the right size, and insert the **Sensor** into the hole. Reinstall the **Plastic Bracket** and screw the **Hex Nut**, and then reinstall the **Tube**. Finally, stuck in the **Metal Buckle** back into the slot.


選擇合適尺寸的小便斗體,將感應探頭裝入小便斗孔,裝回塑膠墊圈鎖緊六角螺帽,裝回軟管,將金屬卡扣卡入槽內。



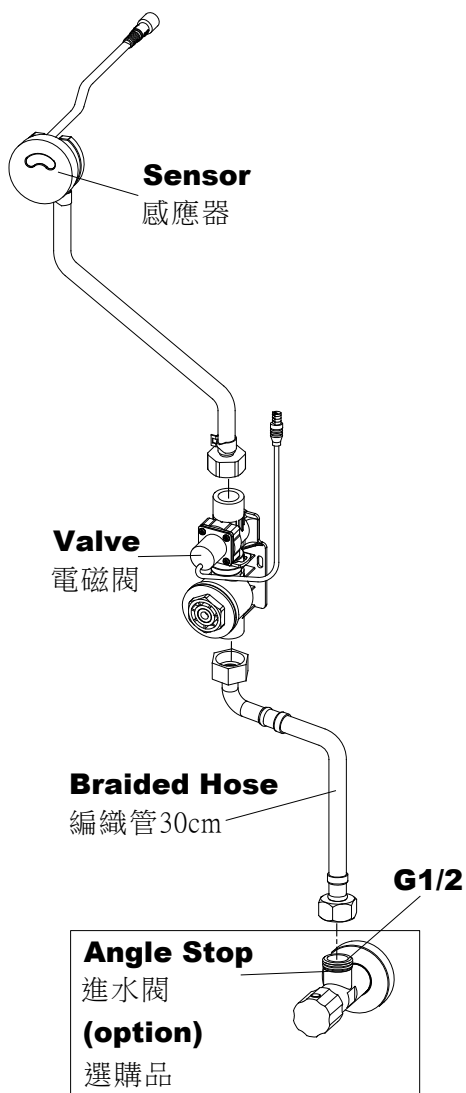

\* Connect the **Sensor Hose** and **Braided Hose** to the **Valve** as shown, and then connect the **Braided Hose** to the **Angle Stop**.

依圖示將感應器軟管接到電磁閥,編織管接到電磁閥,編織管再接到進水閥。

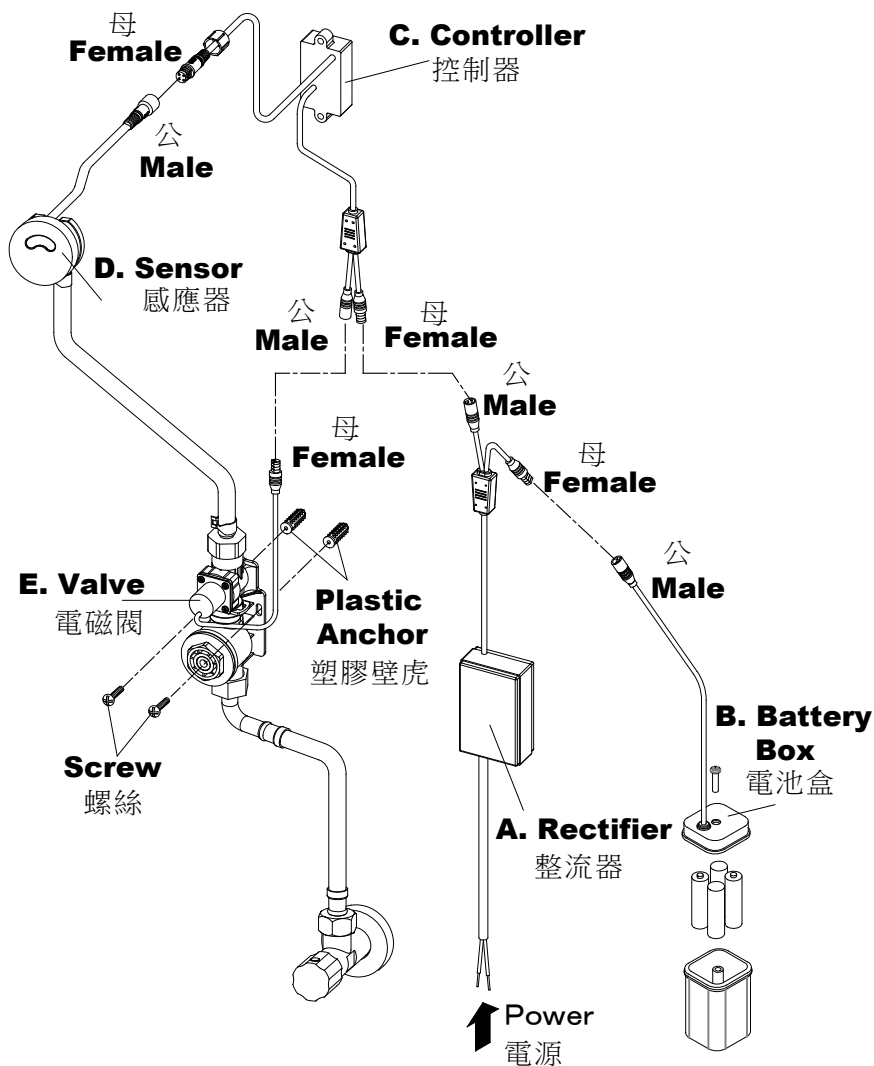

\* Connect the **Sensor wire, Controller, Valve, Rectifier, and Battery Box** together as shown.


Fix the Valve on wall with provided **Screws** after connection.

依圖示將感應器電線 & 控制器 & 電磁閥 & 整流器 & 電池盒電線連接在一起。

安裝完成後可用螺絲將電磁閥固定在牆面上。

The connection of sensor to all circuits and inlet valve is as shown below:

感應器連接各電路及進水閥,如下圖所示。

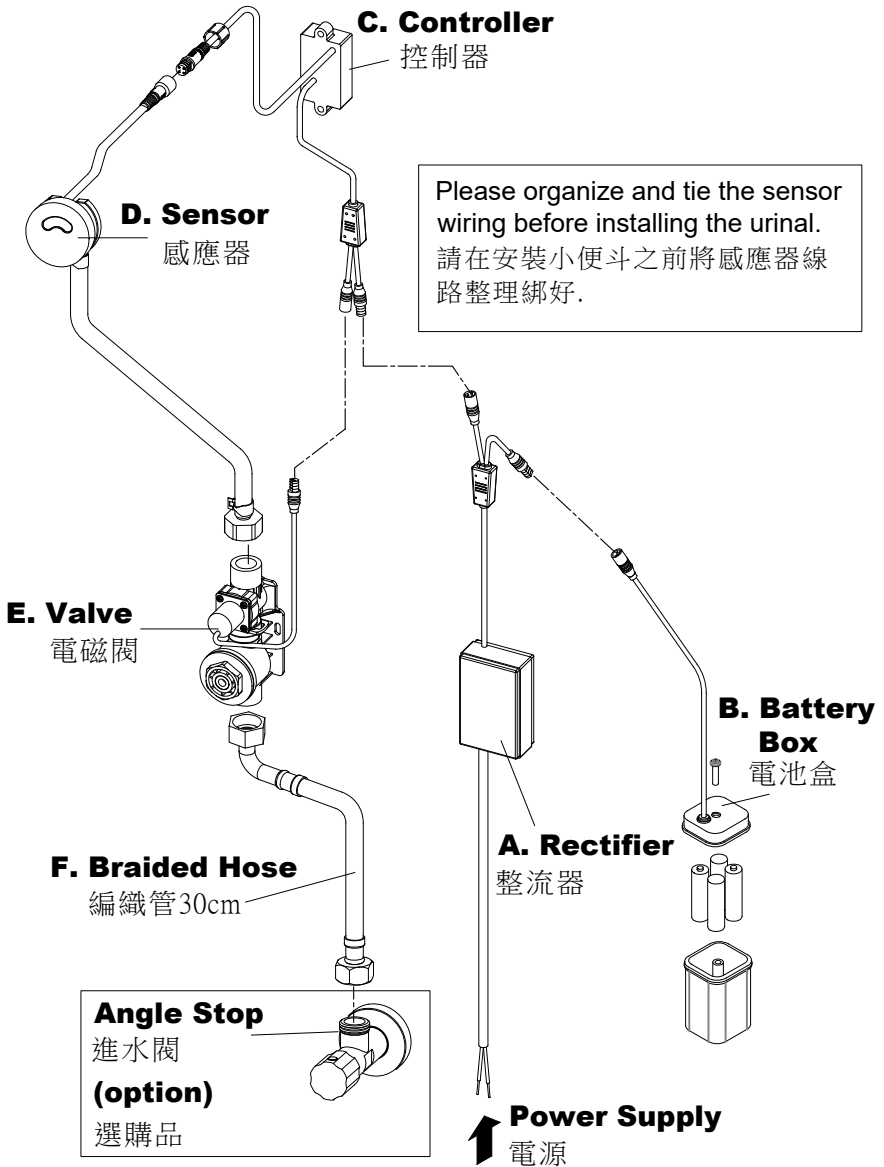

## WARRANTY

Sheng Tai Brassware Co., Ltd. offer a three-year warranty on all of the Faucets & Bathroom Accessories from date of purchasing. The warranty covers any defect in material and workmanship during normal residential use. The following conditions of defect are charged for maintaining.

- Damage caused by accident, misuse, improper care and cleaning.
- Improper using or installation.
- Defects because of the external factors, such as erodent environment (ex. Seashore or mineral spring.), animal bites or dead bug remains in product etc.
- Defect because of sand or impurity stuck in faucet water way.
- Using water not adhered to the regulations of national standard.
- Deficiency caused by freeze.
- Not showing this warranty card.
- Not filling out in the blank of name of customer, date of purchase, cost of purchase, company of installation (retail store) and stamp on warranty card.
- Sheng Tai Co., Ltd. is not responsible for labor charges, installation, or other incidental or consequential costs.

勝泰衛材股份有限公司提供所有的水龍頭及浴室配件，從購買之日起三年保固。保固範圍包括在一般住宅正常使用的期間，發現產品有任何材質和加工上的瑕疵。如瑕疵有下列情形，將收取維修費用。

- 因意外事故、不當操作使用，不當的保養維護和清洗所造成的損害。
- 不當使用或安裝。
- 外在因素造成產品的瑕疵，如易造成侵蝕的環境（如濱海或溫泉地區）、動物嚙咬或昆蟲屍體存在於產品內造成的損壞。
- 因砂子或雜質卡住水龍頭水路造成的損壞。
- 沒有依循國家標準的規定使用水源造成的損壞。
- 因冰凍造成的水量不足。
- 未出示此保固卡。
- 未在空白處填寫客戶名稱，購買日期，購買成本，安裝公司（零售商店），及保證卡上未蓋章。
- 勝泰衛材股份有限公司不負責工人費用，安裝，或其他附帶或間接產生的費用。

Customer	Name		Tel	
	Address			
Product	Serial No.		Name	
	Warranty	Three year from date of purchase.		
Purchase place	Store		Tel	
	Address			
Purchase Date				
Purchase Price				

**JUSTIME**  
www.justime.com

**SHENG TAI BRASSWARE CO., LTD.**

No.99 Sec.3 Chang Tsao Rd. Ho Me, Chang Hua, Taiwan

508 台灣彰化縣和美鎮彰草路3段99號

TEL: +886-4-7629971~4

FAX: +886-4-7526980

E-mail: shengtai@ms10.hinet.net

Facebook: www.facebook.com/JUSTIME